


Swish. DELUXE

Read all instructions carefully before installation.

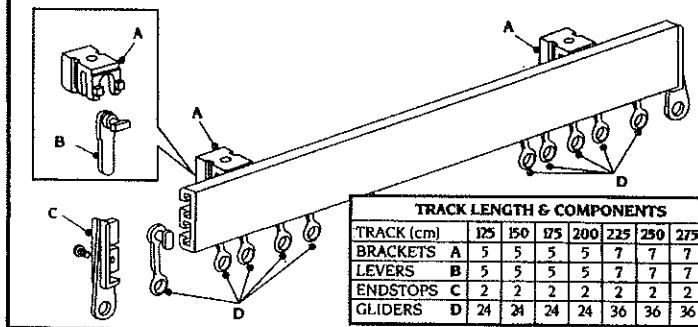

TRACK LENGTH & COMPONENTS		125	150	175	200	225	250	275
TRACK (cm)		125	150	175	200	225	250	275
BRACKETS A	5	5	5	5	5	5	5	5
LEVERS B	5	5	5	5	5	5	5	5
ENDSTOPS C	2	2	2	2	2	2	2	2
GLIDERS D	24	24	24	24	24	24	24	24


WARNING: If used in Conservatories PVC tracks may distort and fail to function due to heat build up. Wooden poles or metal tracks may be more suitable.

1 BRACKET SPACING


We provide everything you need to fit Deluxe to a wooden batten, pre-installed to a wall or ceiling, in straight runs or around bay windows. If fixing to plaster/masonry, wall plugs will be needed.

- Mark a straight level line along the batten to the finished track length required.
- Mark the end bracket positions 6½cm (2½") from each end of the line.
- Mark equally spaced positions for all remaining brackets.

IMPORTANT: See note below for bay windows.

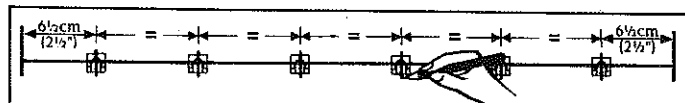


NOTE: FOR BAY WINDOWS BRACKET SPACING AROUND THE BEND IS INDICATED BELOW:

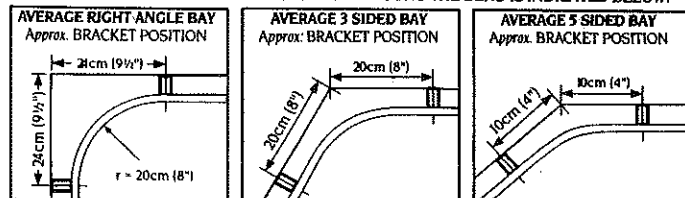


2 BRACKET FIXING

- Screw all brackets A into place. Push lever B into every bracket and leave pointing downwards.

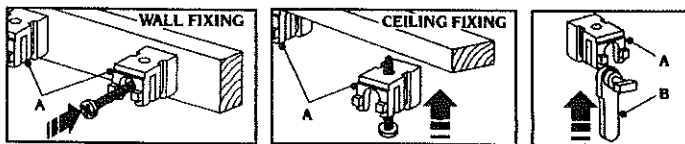

3 JOINING DELUXE

Two lengths of Deluxe can be easily joined to accommodate the widest windows using a D312W centre joiner supported with brackets A 4cm each side. D312W is sold as an optional accessory.

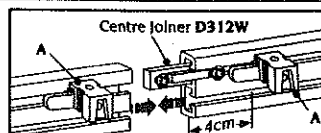

4 SHORTENING DELUXE



NOTE: If shortening a joined length of Deluxe remove equal amounts of track from each end to ensure the join remains at the centre of the track. EG - to remove a total 10cm (4"), remove a length of 5cm (2") from each end of the joined track.

STRAIGHT RUNS (For bay windows see section below).

- Measure the exact length of track required and cut square using a hacksaw. Smooth off cut edges.


BAY WINDOWS - NOTE: In order to ensure accurate finished track length, the track must be measured in position to fully account for the bends.

- Gently warm the track where bends are required. **Do not expose to direct heat.**
- Starting at one end offer the rear channel of track to the fixing brackets A leaving 6½cm (2½") projecting from the first bracket. (Fig. 1). Fit track to required shape and secure each bracket in turn by rotating lever B through 90° to a horizontal position. (Fig. 2).
- Measure 6½cm (2½") from last bracket and mark.
- Release track from brackets by rotating lever B 90° to a vertical position.
- Cut square at mark using a hacksaw and smooth off cut edges.

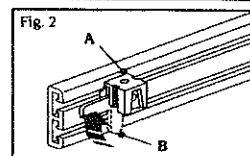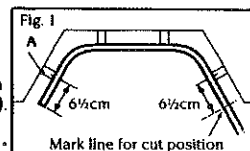

5 ASSEMBLING DELUXE


- Push one end stop C into one end of the track and tighten securing screw.
- Slide all gliders D into bottom channel of track.
- Fit and secure end stop C to opposite end of track. (You will need to position the screw to the other side of the end stop).

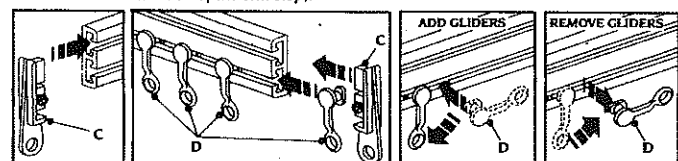

NOTE: Gliders can be added or removed anywhere on the track without removing the end stops. Simply rotate gliders D 90° and lift out of the track. To add gliders reverse the process.

6 INSTALLATION


- Starting at one end offer the upper channel of track to the fixing brackets A leaving 6½cm (2½") projecting from the first bracket. Fit track to each bracket in turn and secure by rotating lever B through 90° to a horizontal position.

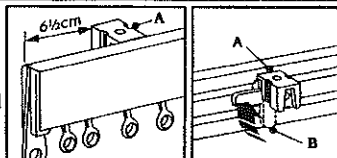

7 HANGING YOUR CURTAINS

- Lift curtains up to track and hook header tape onto gliders and end stops using standard curtain hooks. N800W hooks are sold as an optional accessory.

Maximum recommended curtain weight 14kg (30 lbs).

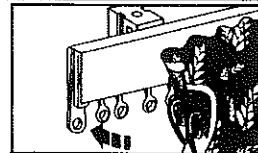

8 MAINTENANCE

The track may be cleaned by wiping the rail and fittings with soapy water. When dry, apply a silicone based polish to the top and bottom running surfaces to ensure a smooth operation.

Swish.

Swish by Sunflex

Keys Park Road, Hednesford,
Cannock, Staffordshire, WS12 2FR