


Metal Curtain Pole

FITTING INSTRUCTIONS


CELTIC EYELET




1. Push the finials on to the poles and place against the window to see if it needs cutting to size

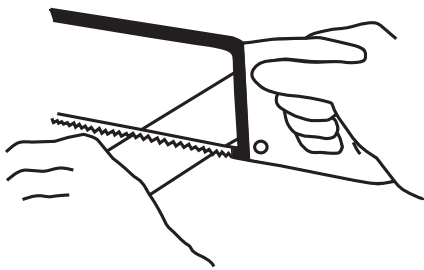


2. Mark the wall for positioning of the brackets, they should be approx 15cm in from the end of the pole. Drill and insert rawlplugs.

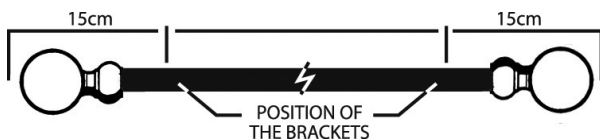


3. Remove back plate and bracket head from the bracket base and fix back plate to wall with screws.

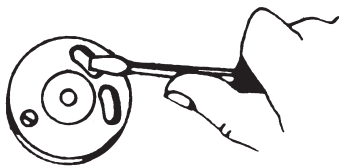


Screw the bracket base to the plate.

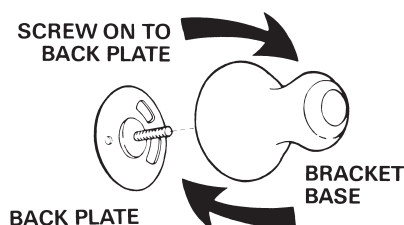


4. Bracket head can be cut down to reduce projection.

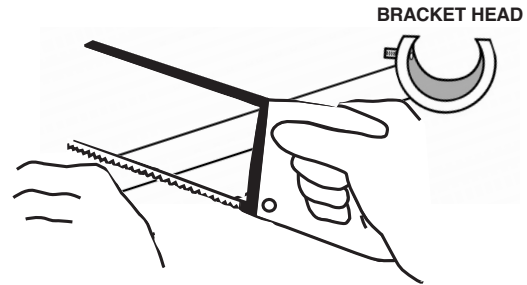


Fix bracket head into bracket base and tighten grub screw.

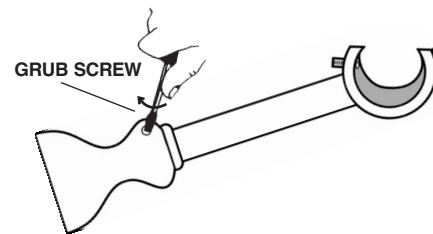

5. Place pole onto bracket and check the pole is level.

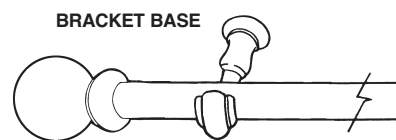

If not you can adjust the back plate by rotating it clockwise or anti-clockwise

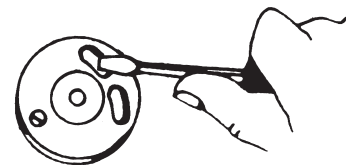

6. Put the pole back on to the brackets and secure pole with grub screw at the back of the bracket head

